




INSTALL SHEET

CLBG15-BRUSH GUARD

2015+ COLORADO/CANYON



PACKAGE CONTAINS

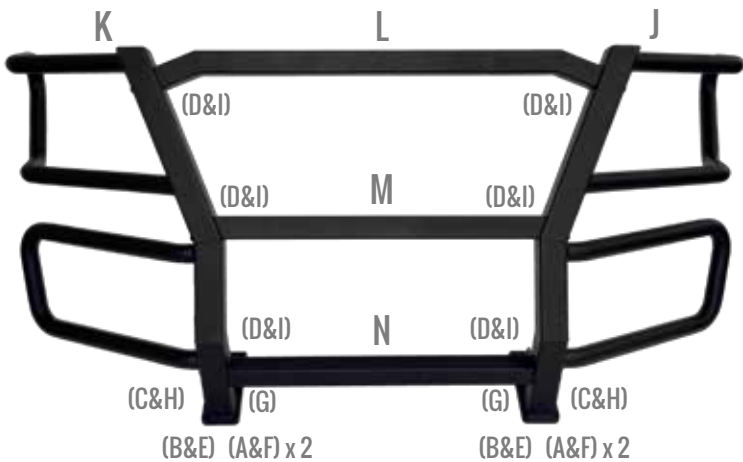

Components:

- J - Right Side Section
- K - Left Side Section
- L - Top Bar
- M - Mid Bar
- N - Bottom Bar

Tools Needed:

- 7/32" Allen Wrench
- 5/8" Wrench
- 9/16" Wrench
- 3/4" Wrench
- 5/32" Allen Wrench

HARDWARE

A - 5/16" Jam Nut



B - 7/16" Jam Nut



C - 7/16" Lock Washer



D - 3/8" Washer



E - 7/16" Set Screw



F - 5/16" Set Screw



G - Puck



H - 7/16" Hex Cap



I - 3/8" Button Cap



1

Loose install right and left brush guards to tow hooks using pucks



The Puck “sandwiches” the tow hook. Brush guard on the bottom, puck on top. (fasteners C&H)



3

Loose install all center bars to both sides. (fasteners D&I)



4

Adjust set screws on pucks as needed to fit brush guard attitude as desired. (fasteners B&E, A&F)



5

Fully tighten fasteners on pucks to side sections



6

Fully tighten all fasteners on center bars



7

Verify all fasteners are secure and brush guard does not rock or slide.



PERIODICALLY CHECK ALL FASTENERS TO ENSURE TIGHT
FOR WARRANTY INFO SEE: WWW.MCAFTERMARKET.COM