




INSTALL SHEET

CLSB15-SPORT BAR

2015+ COLORADO/CANYON



PACKAGE CONTAINS

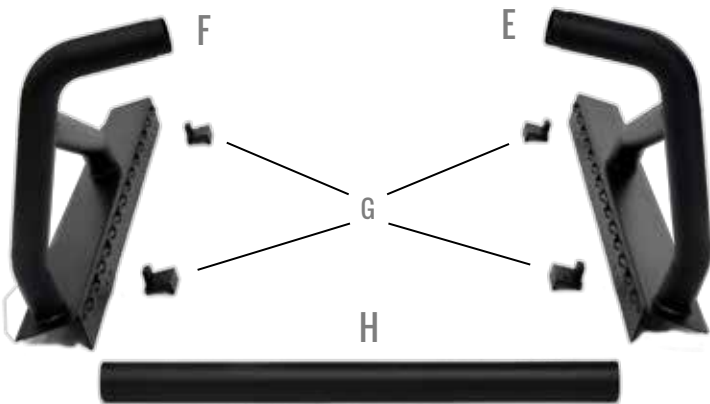

Components:
E - Right Side Section
F - Left Side Section
G - Side Bracket (4)
H - Center Tube

Tools Needed:
7/32" Allen Wrench
3/16" Allen Wrench
9/16" Wrench

HARDWARE

A - 3/8" Set Screw

(4)



B - 3/8" Button Cap

(8)



C - O-Ring

(2)



D - 3/8" Lock Nut

(4)




1

Place an O-Ring over each side section and position each side section on the truck bed. Insert the center tube between the sections and make sure to line the groove up towards the top.



2

Install the set screws and lock nuts on all side brackets as shown. Make sure the nut isn't too tight on the bracket.

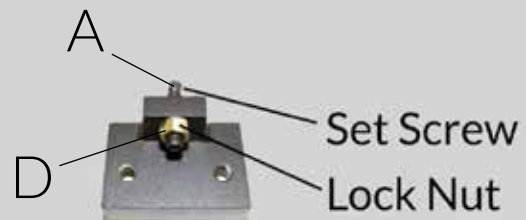

3

Position the side brackets at the front and rear of the side section under the truck bed flange. Align the holes on the side sections and attach using two bracket fasteners per bracket. Repeat on the other side.



4

Tighten set screws on the side bracket to snug the side brackets to the side of the bed. Secure the lock nut. Repeat on the three remaining brackets. Last, verify that all fasteners are secure and sport bar does not rock or slide.

