




INSTALL SHEET

CLBD15-BED DIVIDER

2015+ COLORADO/CANYON
REQUIRES: CLSB15 SPORT BAR

PACKAGE CONTAINS

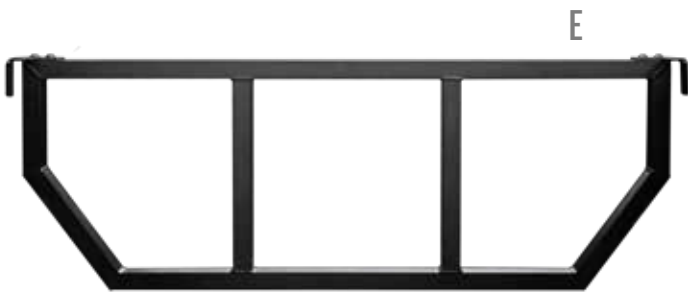

Components:
E - Bed Divider

Tools Needed:
7/32" Allen Wrench
7/16" Wrench

HARDWARE

A - 7/16" Jam Nut



B - 1/4" Lock Washer



C - 1/4" Washer




D - Thumb Bolt

(4)




1

Loosen the pre-installed Bed Divider “hooks” so the divider can be centered to the bed.

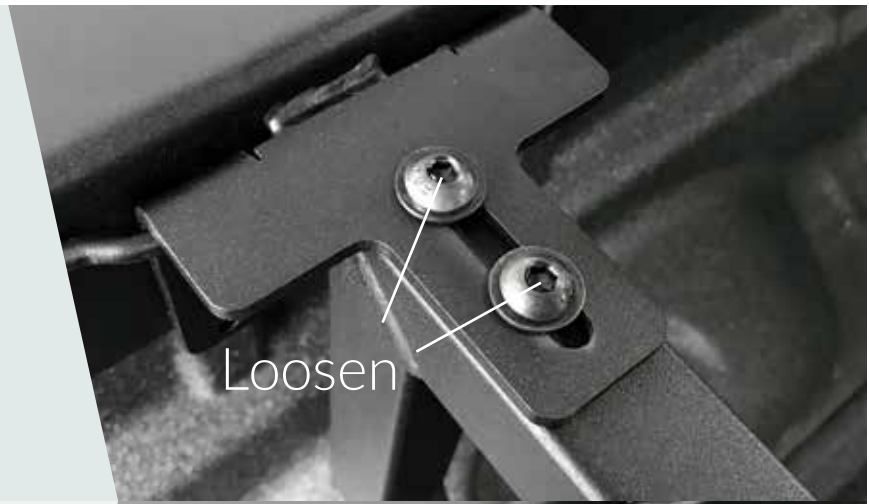


Once centered, tighten “hook” bolts securely.

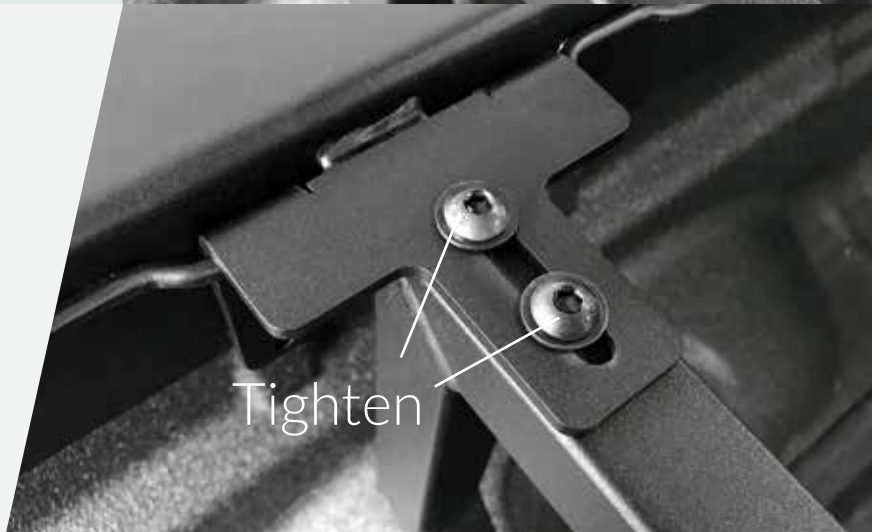

2

Lock divider into place by installing fasteners. Two sets on each side of the truck bed.

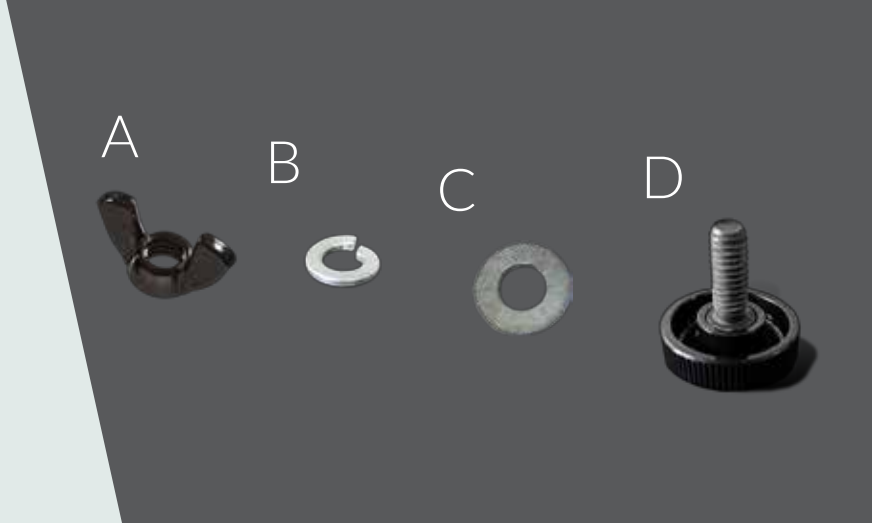

3

Fully tighten fasteners. Periodically check to ensure tightness.

