



INSTALL SHEET

CLTC15-TIRE CARRIER

2015+ COLORADO/CANYON

REQUIRES: CLSB15 SPORT BAR

*Wheel Bolt Patterns Vary - Wheel Mount Hardware Not Included

PACKAGE CONTAINS



Components:
K - Tire Carrier

Tools Needed:
7/32" Allen Wrench
3/16" Allen Wrench
7/16" Wrench
3/4" Wrench

HARDWARE

A - 7/16" Jam Nut



B - 1/4" Lock Washer



C - 1/2" Washer



D - 3/16" Allen Bolt



E - 5/16" Washer




F - 3/8" Button Cap



G - Rail Hooks



H - 1/2" Nut

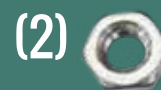

I - Carrier Leg




J - 1/4" Washer



1

Loosely install the carrier "hooks" so the carrier can be centered to the bed.

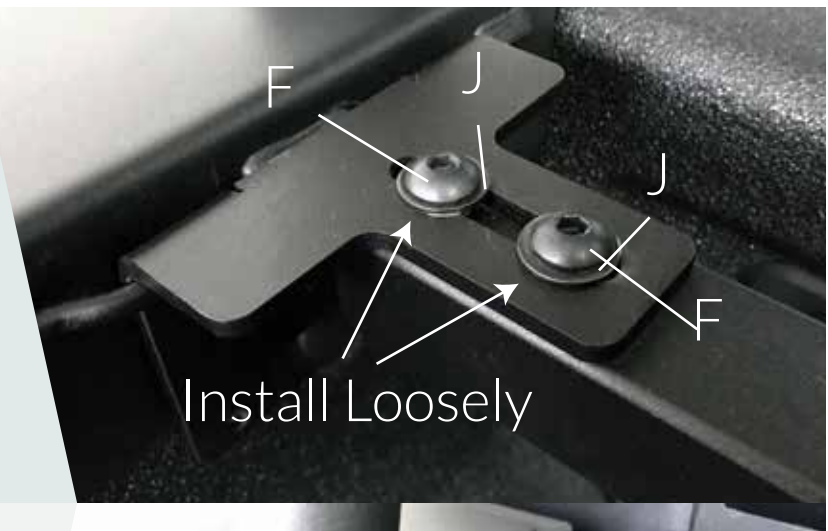


Once centered, tighten "hook" bolts securely.



2

Assemble and install the carrier support "leg" so that the carrier is balanced and supported.

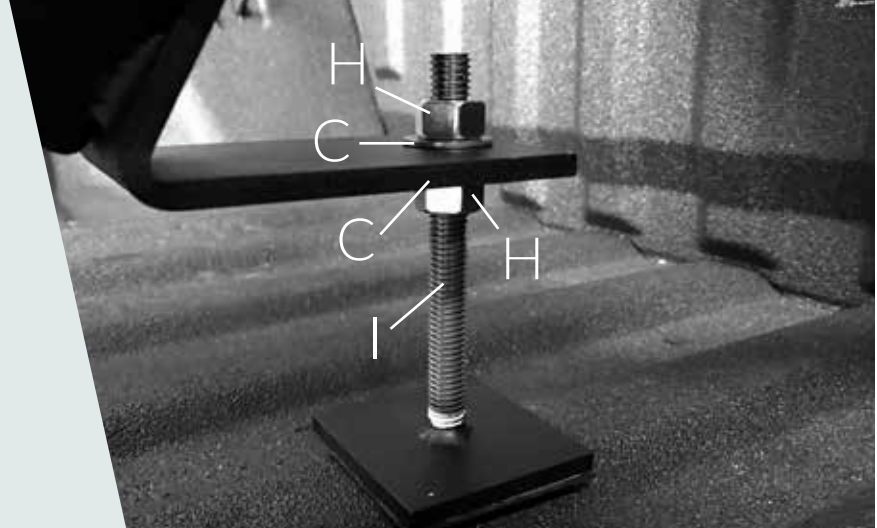

3

Lock carrier into place by installing fasteners. Two sets on each side.

