




INSTALL SHEET

RE4DR15-TUBE DOORS

2015-18 JEEP RENEGADE

VIDEO GUIDES:
WWW.MCAFTERMARKET.COM/INSTALL

PACKAGE CONTAINS

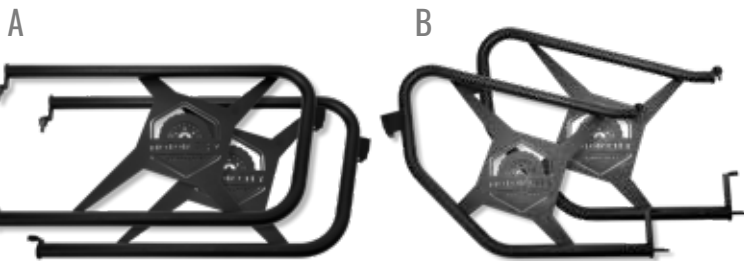

Components:
A - Front Doors
B - Rear Doors

Tools Needed:
M4 Allen Wrench
10mm Wrench
T-40 Torx Driver
13mm Wrench
Flat Head Screwdriver

HARDWARE

Installation uses all of the original vehicle hardware.

IMPORTANT: Review your local laws before venturing out on to any road with your tube doors installed. Use these doors at your own risk.

1

Roll down the windows and trip the door lock latch with a screwdriver so that the vehicle computer thinks the doors are locked.



2

Disconnect the wiring harness. Remove the torx screw from the swing stop. We recommend leaving the swing stop extended.



3

Remove bolts from the top and bottom hinges. Note: These two bolts will be used to reinstall the tube doors. Carefully remove the doors and place aside.



4

Align the tube door over the hinges and slide into place.

Note: The vehicle hinge placement may vary. Tube door hinges might not slide right in. Using the screws you removed from the door, screw the tube door into place.

Align the door latch and bolt into place on the latch bracket.

Repeat the same process for the other door(s).

