




INSTALL SHEET

CLFB15-FRONT BUMPER GUARD 2015+ COLORADO/CANYON



PACKAGE CONTAINS

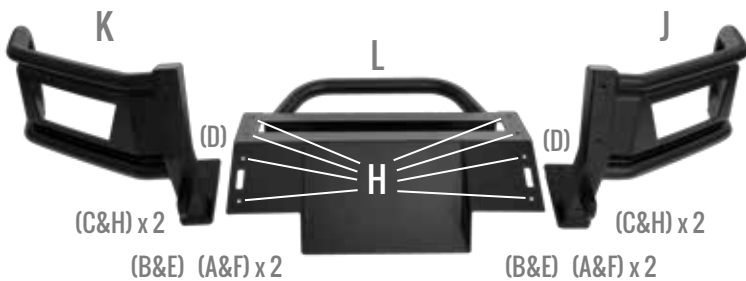

Components:
 J - Right Side Section
 K - Left Side Section
 L - Center Plate

Tools Needed:
 7/32" Allen Wrench
 5/8" Wrench
 9/16" Wrench
 3/4" Wrench
 5/32" Allen Wrench

HARDWARE

A - 5/16" Jam Nut



B - 7/16" Jam Nut



C - 7/16" Lock Washer



D - Puck




E - 7/16" Set Screw



F - 5/16" Set Screw



G - 7/16" Hex Cap

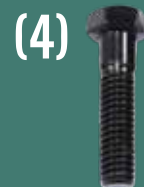

H - 3/8" Button Cap



1

Loose install right and left bumper guard to tow hooks using pucks

The Puck “sandwiches” the tow hook. Bumper Guard on the bottom, puck on top.
(fasteners C&G)



2

Loose install the Center Plate to sides of Bumper Guard (fastener H)



3

Adjust set screws on pucks as needed to fit bumper guard attitude as desired.
(fasteners B&E, A&F)



4

Fully tighten fasteners on pucks to side sections



5

Fully tighten all fasteners on center plate



6

Verify all fasteners are secure and bumper guard does not rock or slide.



PERIODICALLY CHECK ALL FASTENERS TO ENSURE TIGHT
FOR WARRANTY INFO SEE: WWW.MCAFTERMARKET.COM