



INSTALL SHEET


REFB15-BUMPER GUARD

2015-18 JEEP RENEGADE

VIDEO GUIDES:

WWW.MCAFTERMARKET.COM/INSTALL

PACKAGE CONTAINS

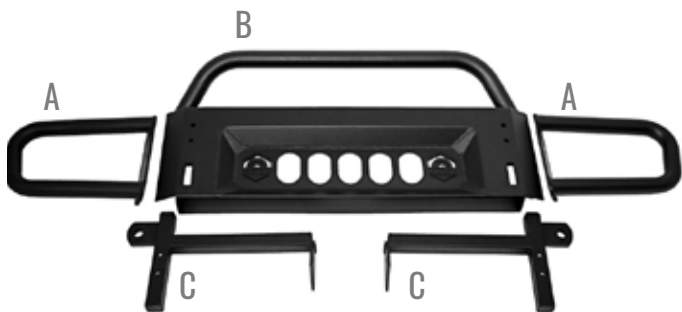

Components:

- A - Right and Left Sections
- B - Center Section
- C - Mounting Brackets

Tools Needed:

- Flat Head Screwdriver
- Socket Wrench
- 14mm Socket
- Universal Joint Adapter
- 18in Socket Extension
- 7/32" Allen Wrench

HARDWARE



1

Remove plastic panels to the left and right of the bumper air intake.



2

Locate and remove 2 bolts and washers on each side (total of 4).



3

Using existing bolts and washers install passenger and driver side mounting brackets (C). Bolt on passenger and driver side sections (A) with provided bolts and washers. **Optional:** If installing a light bar; attach to center section first and feed wiring to desired location before fully mounting to the uprights.



4

Carefully align center section over d-ring bars and slide into place. Fasten into place with provided bolts.

